

Useful functions/

No PC Operation



No PC: is required to send the data to the plotter, the cut data is stored on a USB memory stick and can be selected from the control panel.

Back Ceasing



Clear folds can be made without damaging the printed surface. The number of creasing lines can be increased from the control panel.

Copy Function



You can cut the same data as many times as you like by specifying the number of sheets in the control panel. There is also a dedicated button for this purpose.

Barcode Cut




The plotter uses the barcode information to find the correct cut data from the USB memory stick and cut it. This eliminates


FCX2000-60

FCX2000-120

FCX2000-180

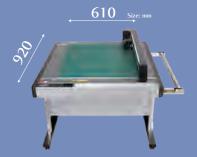



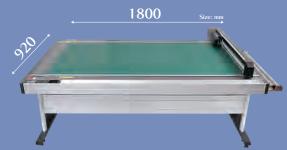



- Before using it, please read the user manual and then please use it properly in accordance with the description.
 To avoid an occurrence of malfunction or an electric shock by leakage, please ensure ground connection and use it in specified power source.

Graphtec Europe B.V. Kruisweg 801-B 2132NG Hoofddorp, The Netherlands







